


## #H3508,H3509 Short Bobber Rear Fender kit

**!** Before installation, thoroughly familiarize yourself with the instructions and illustrations. After installation, make sure all components fit and function correctly before use.

(1)	Short Bobber Rear Fender	1	(5)	Aluminum Spacer	2
(2)	Grommet	1	(6)	Flat Washer	2
(3)	Spacer for Grommet	1	(7)	Flanged Nut M8	2
(4)	Button Head Bolts M8 × 50	2	(8)	M6 Cap Head Bolts & Nuts for 07-09 models	3

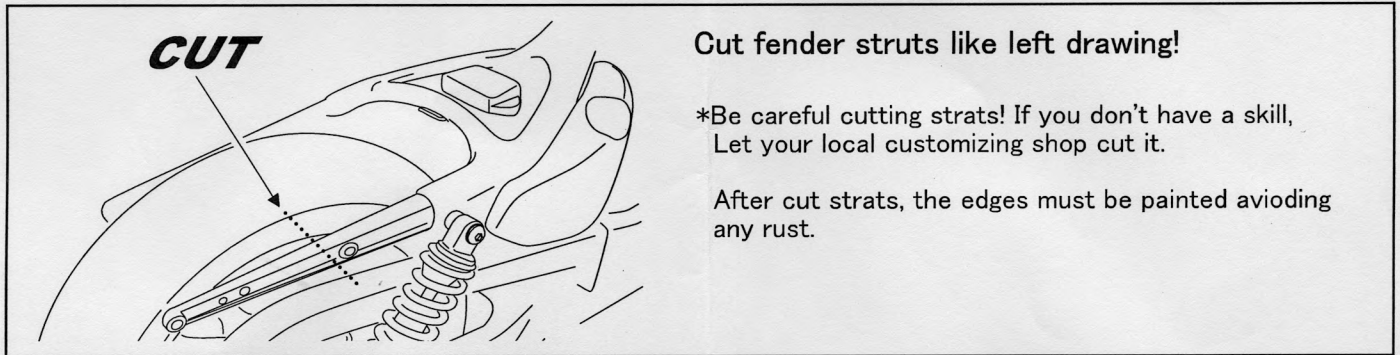

**Cut fender struts like left drawing!**

\*Be careful cutting strats! If you don't have a skill, Let your local customizing shop cut it.

After cut strats, the edges must be painted avioding any rust.

Step1. Remove seat, turn signals and taillight wiring.

Step2. Remove right and lest strut covers and rear fender.


Step3. Refer to the drawing above, cut fender struts. (required high-trained skill!!!)

Step4. Install (2)Grommet and (3)Spacer on (1)Short Bobber Rear Fender.(refer to the drawing1)  
Install ECM mounting kit for '07-'09 models (refer to the drawing2)  
Use OEM bolts on seat.



Step5. Install (1)Fender using (4)Button Head Bolts, (5)Aluminum Spacer, (6)Flat Washer and (7)Flanged Nuts

Step6. Install seat, check fastened bolts, nuts and every hardware, lighting turn signals and taillight.

drawing1

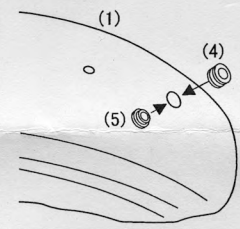

drawing2

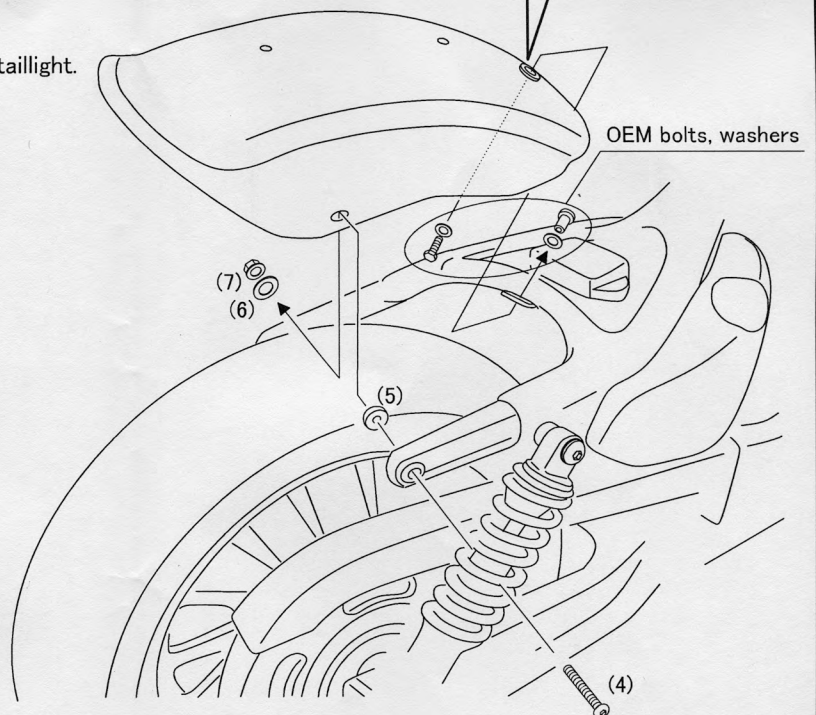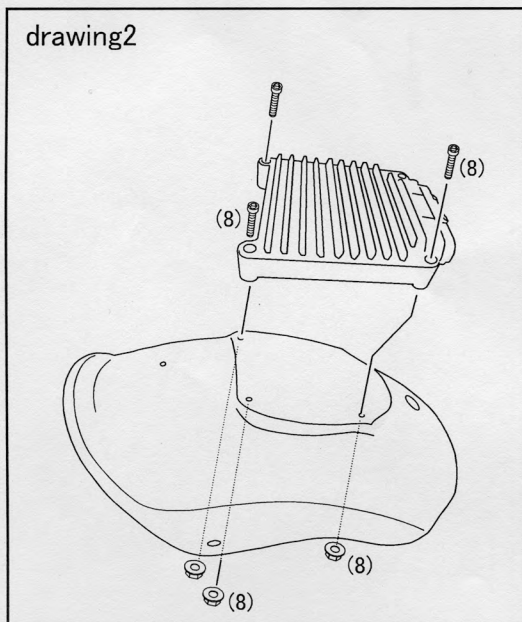

**EASYSRIDERS,INC.**

5-44-10 Kamikitazawa Setagaya-ku Tokyo Japan 156-0057  
Ph. +81-3-3306-5647 / Fax +81-3-3306-5545  
www.easysriders.jp