



INSTALLATION

MAGNUM QUICK CLAMP WITH CLEVIS

FITS: ALL MODELS EQUIPPED WITH ENGINE GUARDS, ACCEPTS MALE MOUNT PEGS

PARTS INCLUDED

- 2 Peg Mount Clevis
- 2 Magnum Quick Clamps
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYNI!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, combination wrenches, or socket set and ratchet.


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Referring to FIG.1, remove the " bolt, spacer, and lock washer, from the clevis. Set these items aside for now, they will be used to install the clevis/peg.

-cont.-

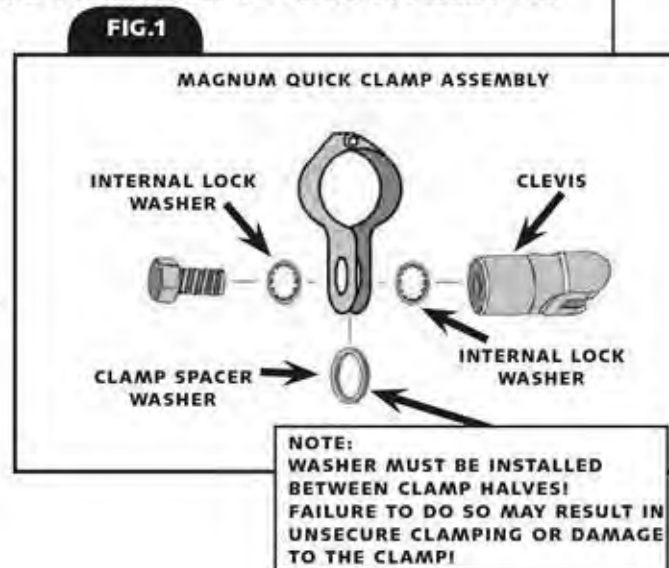

CUSTOMER SERVICE

877-340-3508 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715-347-2983

LIMITED WARRANTY

Kuryakyn warrants that the product is free from defects in materials and workmanship for a period of one (1) year from the date of purchase of the product as set forth in the following conditions:

Kuryakyn shall not be held liable for damage to the product caused by misuse, improper use, or use of the product in a manner not intended by the manufacturer.

The warranty does not cover any damage to the product caused by misuse, improper use, or use of the product in a manner not intended by the manufacturer.

Kuryakyn warrants that the product is free from defects in materials and workmanship for a period of one (1) year from the date of purchase of the product as set forth in the following conditions:

Kuryakyn shall not be held liable for damage to the product caused by misuse, improper use, or use of the product in a manner not intended by the manufacturer.

The warranty does not cover any damage to the product caused by misuse, improper use, or use of the product in a manner not intended by the manufacturer.

Kuryakyn warrants that the product is free from defects in materials and workmanship for a period of one (1) year from the date of purchase of the product as set forth in the following conditions:

Kuryakyn shall not be held liable for damage to the product caused by misuse, improper use, or use of the product in a manner not intended by the manufacturer.

ABOUT OUR CATALOG

Our catalog is a comprehensive guide to all the products we offer. It is available in both print and digital formats. You can browse through the catalog online or download it to your device.

Our catalog is a comprehensive guide to all the products we offer. It is available in both print and digital formats. You can browse through the catalog online or download it to your device.



STEP 3 Determine the approximate desired location of the clamp and mark the location of the clamp on the engine guard with masking tape or similar type of tape.

ATTENTION! The clamp may scratch or mar the surface it is being attached to.

STEP 4 Place the clamp over the engine guard at the mark; center the spacer between the arms of the clamp. (See FIG.1.)

ATTENTION! Determine the mounting location and orientation of the Magnum Clamp before fully tightening the fasteners. The clamp may leave marks when tightened down.

STEP 5 Slide the bolt through one of the splined lock washers, through the clamp arms and spacer, making sure that the spacer is between the clamp arms; then through the remaining splined lock washer.

NOTE Spacer washer must be installed between clamp halves! Failure to do so may result in unsecured clamping or damage to the clamp.

STEP 6 Holding the clamp in position, thread the clevis onto the bolt and tighten. The clamp will compress around the engine guard as the bolt is tightened.

STEP 7 Check for proper location. If necessary, you can loosen the bolt that secures the clevis to the clamp & adjust the peg mount and clamp position for maximum rider comfort. Tighten the bolt securely.

STEP 8 Repeat STEP 2 through STEP 7 for the opposite side.

WARNING! CHECK TO MAKE SURE THAT THERE IS PROPER CLEARANCE WHEN CORNERING. LOSS OF CONTROL OF THE MOTORCYCLE AND SERIOUS INJURY MAY OCCUR IF THE PEG IS NOT POSITIONED PROPERLY. REPOSITION THE CLEVIS IF NECESSARY SO THAT THERE IS ADEQUATE CORNERING CLEARANCE.

STEP 9 Tighten all fasteners.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

PEG INSTALLATION

NOTE The following steps are provided to help with the installation of pegs. These steps will work for most applications.

STEP 1 Remove the SHCS screw and D-washer from the clevis (refer to PIC.1.) Save the screw and washer.


STEP 2 Place the peg adapter and D-washer in between the clevis arms.

STEP 3 Insert the SHCS screw that was removed in STEP 1 and tighten.

STEP 4 Repeat STEP 1 through STEP 3 for the other side.

Ride On!

Kuryakyn®

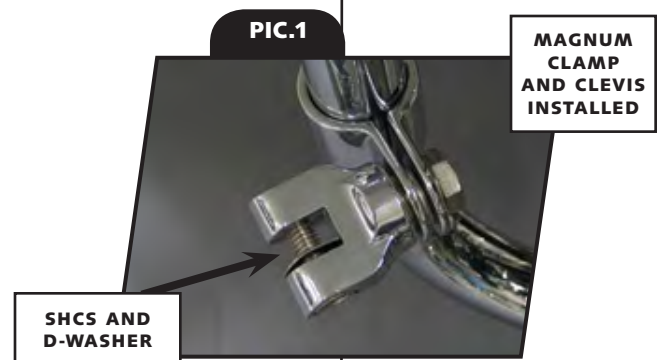

PAGE
2

MAGNUM QUICK CLAMP W/ CLEVIS INSTALLATION