ROLAND SANDS DESIGN.

ASSEMBLY INSTRUCTIONS

PRODUCT DESCRIPTION

SPORTSTER XL NARROW GLIDE & ANY MODELS WITH 1/2" RISER HOLES. | 0208-2060-SMB | 0208-2060-BM | 0208-2060-CH

1. Place motorcycle on a secure lift or stand.

2. Remove the factory riser clamp and handlebars. Consult your models service manual for specific instructions.

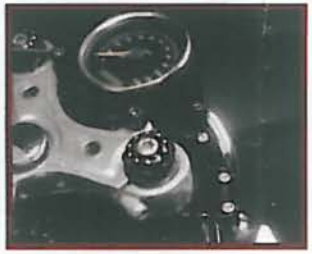

3. Drop in the RSD riser plugs into the holes on the upper triple clamp.

4. Install the supplied 3/8" button head screw, flat washer, and lock washer from the underside of the triple clamp and torque to 15 ft-lbs.

5. Repeat on the other side and hit the road!

For questions pertaining to the installation of this product, please contact the Performance Machine technical department at 1-800-479-4037. This product is manufactured in the USA by Performance Machine LLC.